



----- Cut here to remove. Do Not Tear! -----

SPICER PEAK SET UP INSTRUCTIONS

 
 
1. Remove contents from stuff sacks and spread out the tent body over your desired camp site.
2. Assemble the poles: two longer, main poles and a single, shorter ridge pole.
3. To ensure each pole section is fully seated, insert each pole section into the next by hand, instead of allowing the shock cord to snap them together.
4. Slide the two longer, main poles through the crossing pole sleeves and hoist the tent by securing the pole tips into the grommets at each webbing corner.
5. Working your way around the perimeter of the tent, connect the tent clips to the poles at each corner.
6. Insert the shorter ridge pole into the ridge pole sleeve and secure pole tips into the clips located above each door.
7. At this point you will have a free-standing structure. Secure all 4 corners by staking them out.
8. Drape the rainfly over the tent body and match the colors of the webbing on the fly with the webbing on the body.
9. Insert the ridge pole tips and clips into the small pockets located on the underside of the rainfly near the tops of the vestibule zippers.
10. Attach all hook and loop tabs on the underside of the fly to the corresponding poles. These are located beneath the guy-out points and should be properly secured to the poles for best structural integrity.
11. Make sure the webbing at each buckle on the fly is completely slackened. Attach the buckles on the fly to those on the tent body, being sure to match the buckle color.
12. Tighten the webbing on each corner buckle as needed to keep the fly taut.
13. Stake out the vestibule doors.
14. Stake out all guy-lines and adjust as needed to take out the remaining slack.
15. Enjoy your Spicer Peak tent!

Separate 6" length pole segment included for emergency field repair. Slide repair pole over the break to act as a splint. Secure splint in place with tape.


FAST FLY SET UP INSTRUCTIONS

If you purchase the optional Big Agnes Spicer Peak footprint for your tent, it will enable you to pitch a Fast Fly shelter while leaving the tent body behind. The Fast Fly configuration requires the footprint, tent fly, poles and stakes.

1. Lay the footprint on the ground and stake out all four webbing corners.
2. Assemble the poles: two longer, main poles and a single, shorter ridge pole. To ensure each pole section is fully seated, insert each pole section into the next by hand, instead of allowing the shock cord to snap them together.
3. Place the two long poles in an 'X' on the ground with the ends near each corner of the footprint. Place the shorter, ridge pole on top of the 'X', centered between the same-colored footprint corners.
4. Drape the rainfly over the poles matching the colors of the webbing on the fly with the webbing on the footprint.
5. Attach the long hook and loop strap on the underside of the center of the fly around all three poles.
6. Insert the ends of the ridge pole into the small pockets located on the underside of the rainfly near the tops of the vestibule zippers.
7. Hoist the structure by lifting the poles and inserting the tips of the long poles into the grommets at each footprint corner.
8. Attach the hook and loop tabs located beneath the guy-out points to the corresponding poles. They should be properly secured to the poles to improve overall structural integrity.
9. Make sure the webbing at each buckle on the fly is completely slackened. Attach the buckles on the fly to those on the footprint, being sure to match the buckle color.
10. Tighten the webbing on each corner buckle as needed to keep the fly taut.
11. Stake out the vestibule doors.
12. Stake out all guy-lines and adjust as needed to take out the remaining slack.
13. Enjoy your Spicer Peak tent!

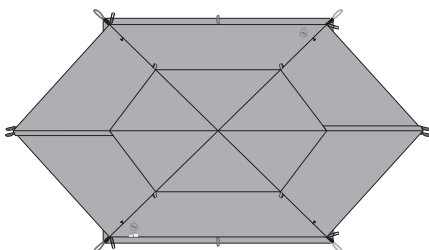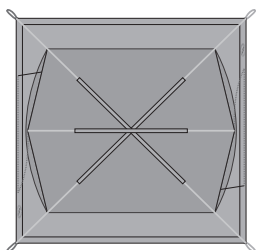

Spicer Peak 4 and 6 Tent Body and Fly

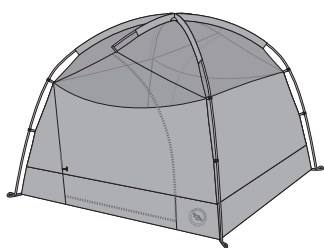 

Spicer Peak 4 and 6

Thanks for choosing a Big Agnes tent!

Please feel free to contact us if you have any questions or comments.

tech@bigagnes.com

HELPFUL HINTS FOR TENT SET UP

- Our tents are easy to set up but we suggest you practice once at home before using them for the first time to avoid late night bickering with tent mates while fumbling around in the dark.
- Before pitching tent, clear campsite of debris that may pierce tent floor.
- We recommend staking out all corners, vestibules and guylines to increase space and keep your tent from becoming a tumbleweed.
- Hang onto your stuff sacks or they'll blow away and create backcountry litter.
- Pull on the pole sleeve fabric when inserting poles to avoid any bunching in the material.
- Push rather than pull poles through pole sleeves.

TENT CARE

Storage

Always make sure your tent is dry and free of debris before storing. Fold and roll your tent a different way each time to avoid permanent creases. Store in a cool, dry place. Never leave your tent in hot temperatures (such as a car trunk or attic space), as it will damage the material coatings. Storing your tent damp can result in mildew growth, which may cause your tent to smell, leak or delaminate. Mildew damage is not covered under warranty.

Cleaning

For light cleaning, you can sponge the tent with warm water. If it's necessary to wash the entire tent, always use cleaners recommended specifically for tents. We recommend McNett Mirazyme cleaner, or Nikwax Tech Wash. Do not dry clean or machine-wash your tent. Detergents and dry cleaning solvents will damage the fabric and ruin waterproofing. Never use hot water, bleach, liquid detergents or dishwashing liquids.

Seam Sealing

Seam tape alone is durable enough to prevent water leakage. Any seams that have been taped do not need to be seam sealed with a liquid sealer unless you want extra protection. Make sure the seam-sealer is completely dry before re-packing your tent. Damage caused by misapplication may void warranty.

Zippers

Keeping your zippers clean will help keep the coils and sliders from wearing out. If filled with dirt, vacuum or brush zippers before storing tent. We recommend McNett Zip Care.

Repairs and Warranty

All Big Agnes tents are guaranteed against manufacturing or material defect. We do not warranty products damaged from normal wear and tear, alteration made by owner, misuse, accidents or damages caused by uses other than intended. Damage due to misuse, normal wear and tear, or improper care may be repaired, at the discretion of Big Agnes, at a reasonable charge. Tents returned for repair must be clean and free of debris.



For more information on Tent Care or our Warranty and Return policy, see www.bigagnes.com

P.O. Box 773072 • Steamboat Springs, Colorado • 80477

Toll Free: 877.554.8975 • www.bigagnes.com



----- **Cut here to remove. Do Not Tear!** -----